

# **Installation Guide**

**Release Pop Out Ultra Slim Portrait Mount** 

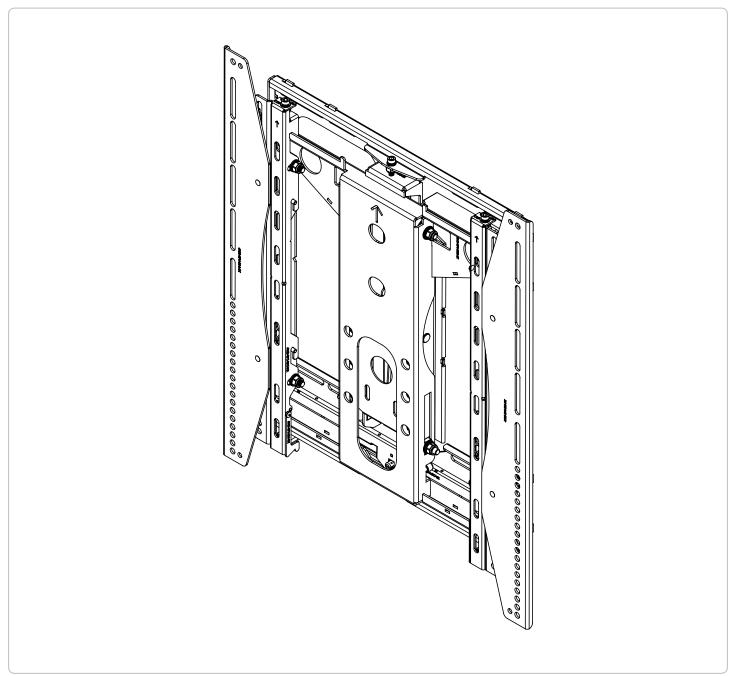


Maximum Flat Panel Weight: 100 lb. / 45.35 kg.

### **Included Components**

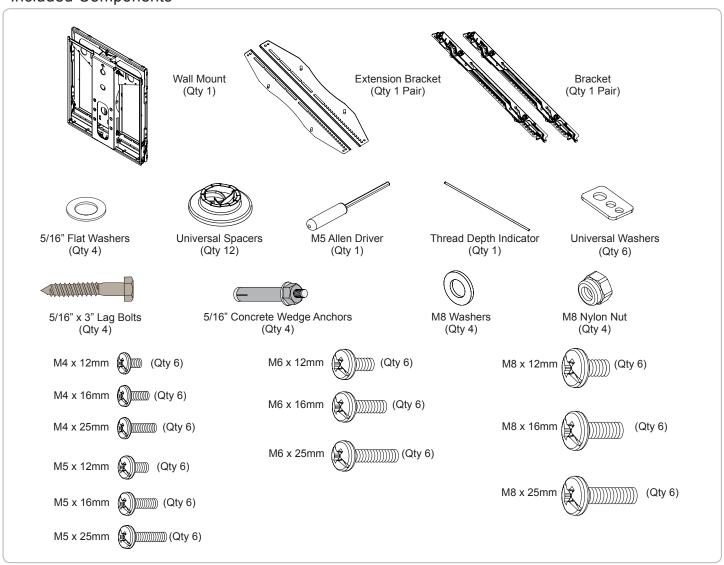

### Required for installation

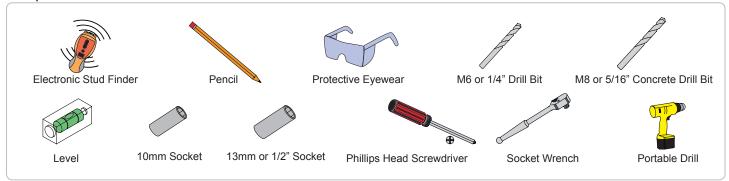






## **Wood Stud Installation**



You must secure the mount to two (2) wall studs with four (4) lag bolts (2 lag bolts for each stud found).

- Use a stud finder to determine the wall studs in the vicinity of the mount.
- 2) Use a pencil to mark each of the wall studs.

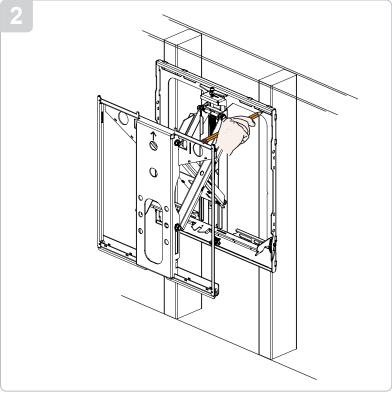




Two people are recommended for this step; one person to level the mount and another person to mark the wall stud location.


- 1) Place the mount against the wall in the desired viewing location.
- 2) Use a pencil to mark the upper right mounting location



### **Installation Guide**

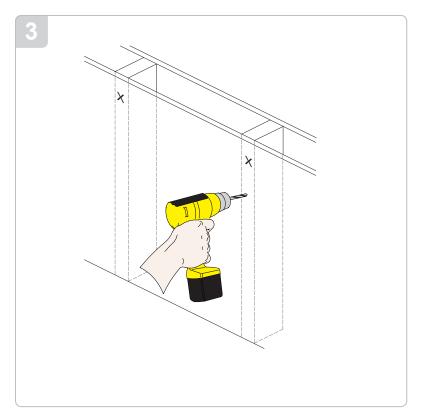


Drill a "pilot hole" on the upper right mark using a M6 or 1/4" drill bit and power drill.

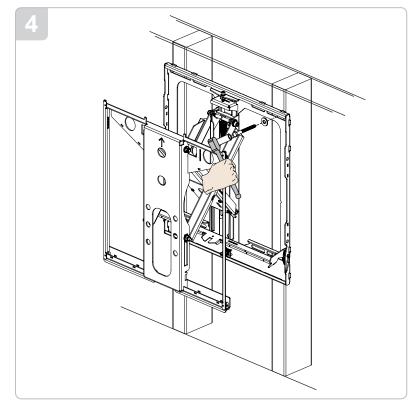


- 1) Place the mount against the wall and align it with the pilot hole.
- 2) Insert one (1) 5/16" x 3" lag bolt and one (1) 5/16" washer into the upper right pilot hole.
- Use a socket wrench and a 13mm or 1/2" socket to tighten the lag bolt.



Do not over tighten the lag bolt.

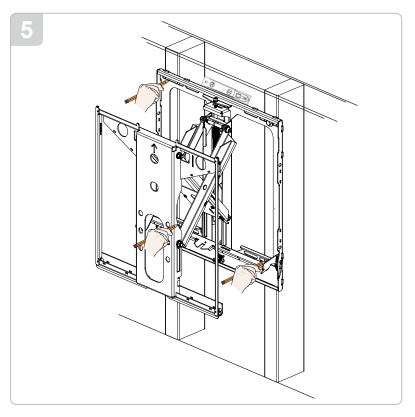


- 1) Level the mount using a leveler
- Use a pencil to mark the remaining three (3) mounting locations of each wall studs.

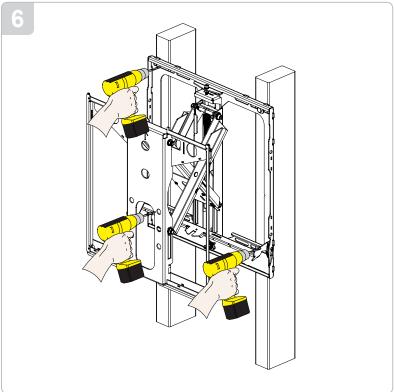

Drill a "pilot hole" on each of the marks with a power drill and a M6 or 1/4" drill bit.




#### **Installation Guide**

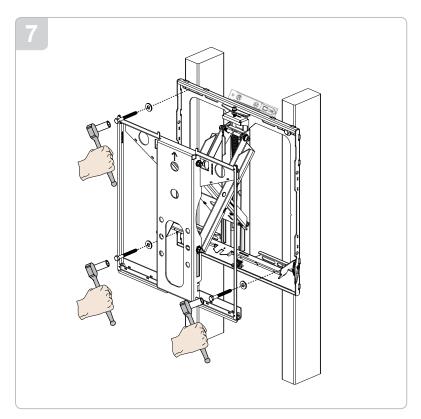

- Insert one (1) 5/16" x 3" lag bolt and one (1) 5/16" washer into each pilot hole
- Tighten all lag bolts using a socket wrench and 13mm or 1/2" socket.




Do not over tighten the lag bolts when attaching the mount to the wall. Improper installation may result in personal injury or property damage.

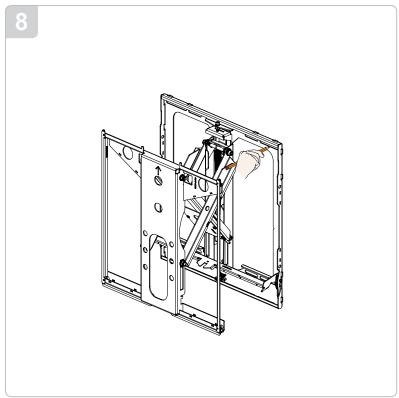


## **Concrete wall Installation**

- 1) Place the mount against the wall in the desired viewing location.
- 2) Use a pencil to mark the upper right mounting location




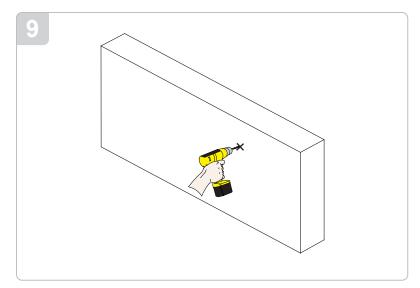

Use a drill and M8 or 5/16" concrete drill bit to drill a pilot hole.

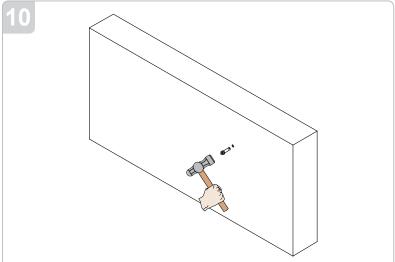

- Insert a concrete wedge anchor into the hole. Lightly tap the concrete wedge anchor into place with a hammer.
- 2) Remove the nut and washer from the concrete wedge anchor.

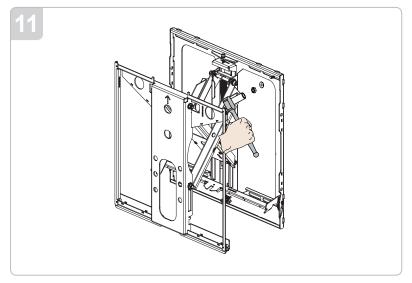


- Place the LMVSP against the wall over the threaded shaft of the concrete wedge anchor.
- Replace the washer which you removed from the concrete wedge anchor with the 5/16" washer.
- Attach the nut and 5/16" washer to the concrete wedge anchor and tighten using a socket wrench and a 10mm socket.




Do not over tighten concrete wedge anchor




### **Installation Guide**

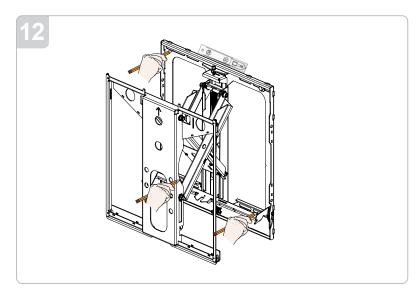


- 1) Level the LMVSP using a leveler
- 2) Mark up the remaining three (3) mounting locations.
- 3) Remove the LMVSP

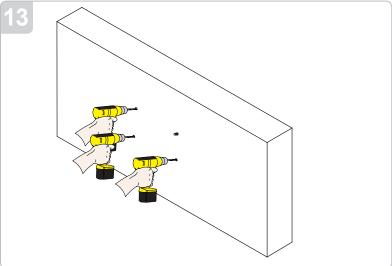

Use a drill and M8 or 5/16" concrete drill bit to drill three (3) pilot holes.

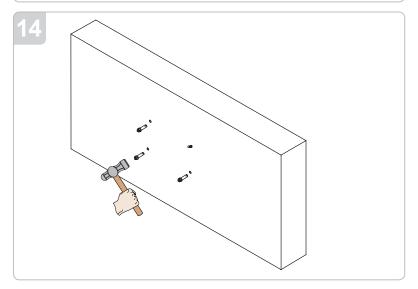

- Insert the concrete wedge anchors into each hole. Lightly tap each concrete wedge anchors into place with a hammer.
- 2) Remove the nuts and washers from the concrete wedge anchors.

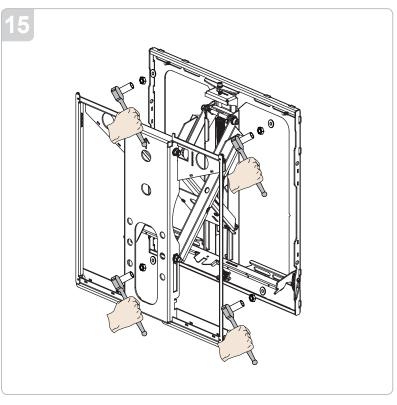


- Place the LMVSP against the wall over the threaded shafts of the concrete wedge anchors.
- Replace the washers which you removed from the concrete wedge anchors with the 5/16" washers.
- Attach the nuts and 5/16" washers to the concrete wedge anchors and tighten using a socket wrench and a M10 socket.



Do not over tighten concrete wedge anchor

## **Installing OPTIONAL Model Specific Spacers**

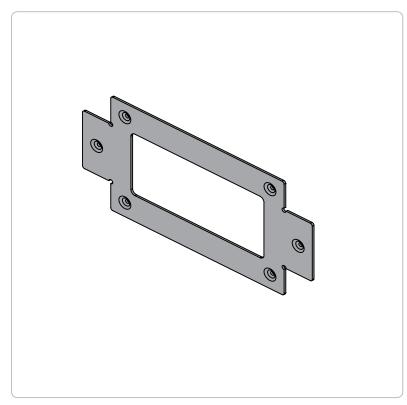


LMVSP 's dedicated flat-panel spacers are engineered with the knowledge that aligning each flat-panel on a large wall is time consuming and costly.

These model-specific spacers are available for most flat-panels, which significantly reduces the installation time. (Call Customer Service to inquire about model specific spacers.)



#### **Installation Guide**

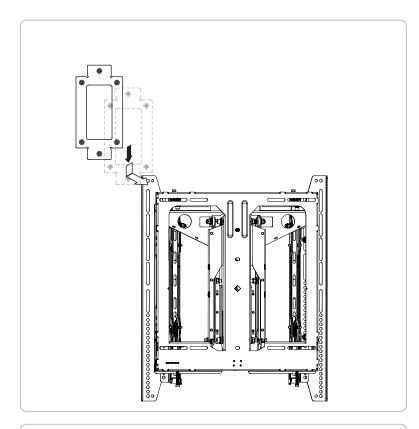




This spacer is shown for illustration purposes only. Your spacer may look different depending on the display model you are installing.

Once your LMVSP is mounted in the desired location and is level, align your spacer to the top left or right (depending on your install direction) corner register tabs of your mount.

You may use commercially available hardware to secure the spacer to the wall during installation (depending on the wall material). You may utilize the same spacer for multiple LMVSP installations.

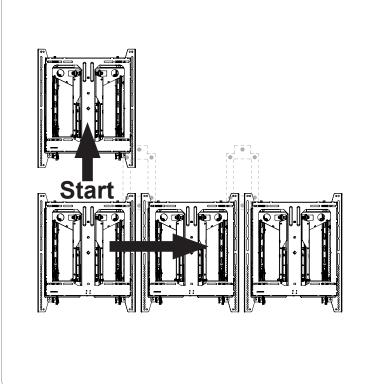


Multiple LMVSP mounts can be installed using model specific spacers. Simply repeat step one when installing each of the surrounding LMVSP mounts. Use one spacer for each 2x2 installation by mounting it to the wall, or utilize the same spacer as many times needed to complete an unlimited LMVSP large matrix video wall.

- Make sure the spacer is plumb and level and mark each corner where the LMVSP will be mounted (or secure to the wall). It is best to start from the bottom corner and work your way up.
- Install the second mount working in a horizontal direction.
- 3. Ensure that the mount remains plumb and level.
- Repeat this step for each mount horizontally
- To install multiple rows, place spacer between previously installed LMVSP's on the bottom row. Make sure the spacer is plumb and level, mark the corners (or secure to the wall) to be sure of where the LMVSP should be and secure your mount to the wall.



### **Selecting the Mounting Hardware**

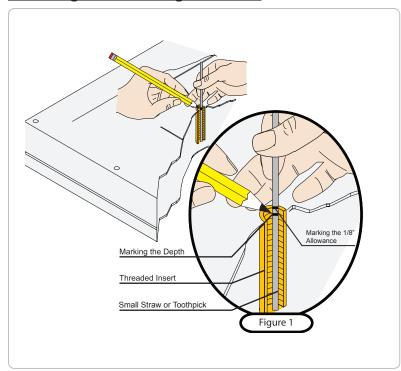


- Insert a small straw or toothpick into the threaded inserts found on the back of the flat-panel.
- 2) Use a pencil to mark the depth of the threaded insert on the small straw or toothpick.
- 3) Mark the straw or toothpick 1/8" above the depth of the threaded insert, as shown in Figure 1.
- 4) Insert the small straw or toothpick into the remaining threaded inserts to compare and verify their depth using the straw or toothpick's 1/8" allowance mark.
- Locate the correct diameter screw for the threaded insert.




If the screw you selected is longer than the 1/8" allowance mark on the small straw or toothpick, as shown in Figure 2 and Figure 3, do not use this screw. The screw length must not bypass the mark.

6) Test each size of the screws provided.

The correct screws should thread easily into the mounting point and not pull out when tension is applied.

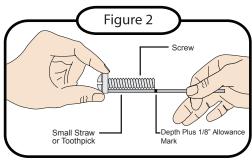

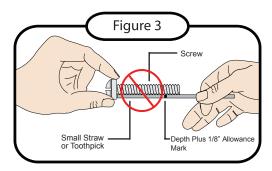

## Securing the Adapters


Optional adapters are available with your LMVSP mount.
Secure the adapters to the LMVSP brackets with the supplied

(4) M8 washers and (4) M8 nuts.



#### **Installation Guide**

### **Universal Washer Installation**

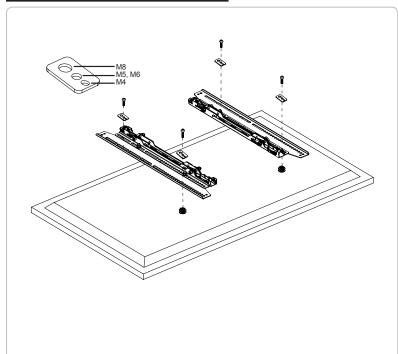

Premier Mounts' Universal Washers are designed to accommodate the various M4, M5, M6 and M8 hole sizes required by flat-panels.




Do not place excessive pressure on the back of the flat-panel, as this may damage your flat-panel.



The Universal Washer must be installed between the head of the mounting screw and the mounting bracket as shown.

## **Universal Spacer Installation**

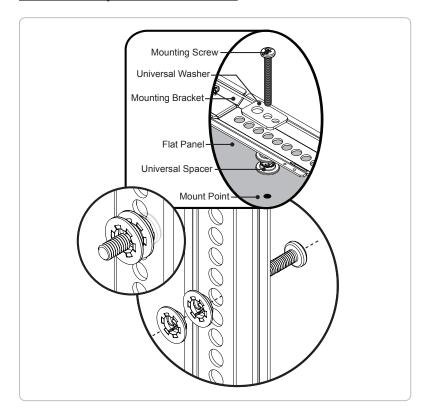

Premier Mounts' Universal Spacers allow you to attach the mounting bracket to flat-panels which have recessed or uneven mount points. Each Universal Spacer adds 1/4" to the distance between the mounting bracket and your flat-panel.




The Universal Spacers must be stacked and oriented as shown.



The Universal Spacers must only be installed between the mounting bracket and your flat-panel.



## **Attaching the Mounting Brackets to the Flat-Panel**

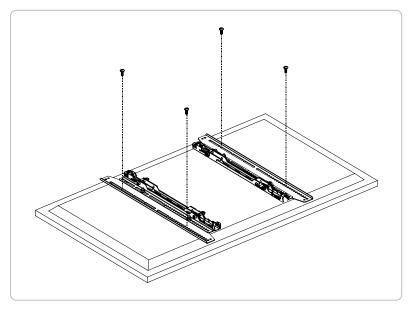

1) Secure each mounting bracket to your flat-panel by inserting a minimum of two (2) screws per bracket.



Do not overtighten the mounting hardware.




Make sure the directional arrows on the mounting brackets are facing up.

NOTE: For smaller vesa bolt patterns, reverse the mounting brackets.

 Before tightening the screws, push the bracket up to remove slack from the bracket, then tightened the screw.

## **Attaching the Flat-Panel to the Mount**

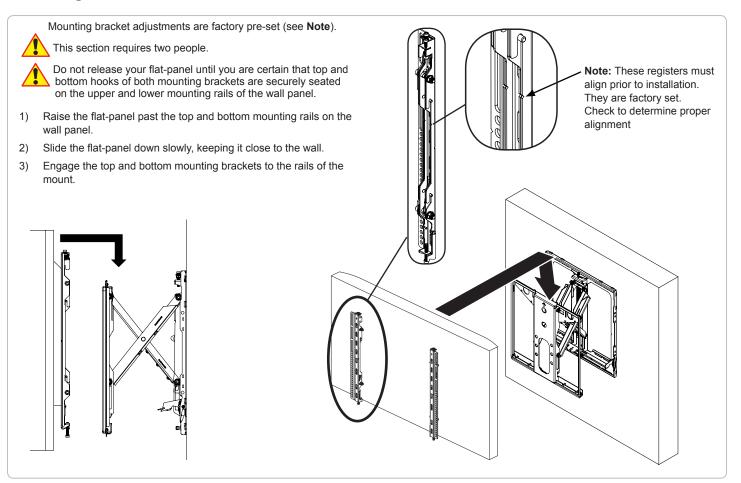



#### **Installation Guide**

## **Post-Installation Adjustments**


The LMVSP has a set of post-installation adjustments on each mounting bracket (Figure 1).

Use the M5 Allen Driver (supplied) to fine-tune adjust.

Make sure the the locking safety screws are loosened before making adjustments.

Note: Screws have a limited travel adjustment.

Do not overtighten or over adjust the screw to avoid damage to threaded holes.

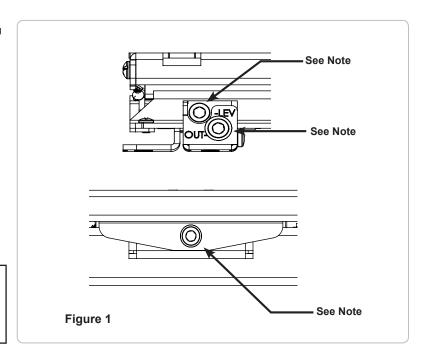

## **Locking Safety Screw Installation**




The locking safety screws keep the flat-panel from being accidently dislodged from the LMVSP.

- Locate the pre-installed security locking safety screw at the bottom of each of the mounting brackets.
- Use the M5 Allen driver (supplied) to tighten the locking safety screw.

Note: Tighten screw to surface, then tighten 1/4" turn



Do not overtighten the locking safety screws.

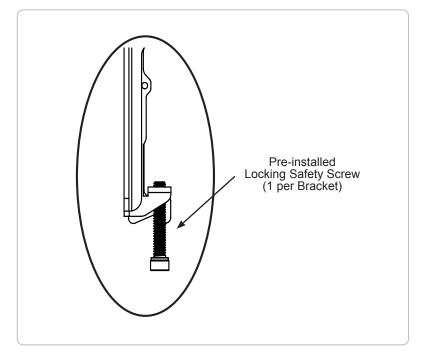


# **Move Inward**







**Right Control** 

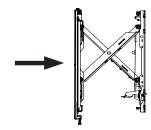


# **Move Outward**



Left Control



**Right Control** 

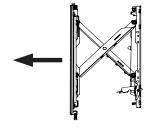


## Tilt Left



Left Control



Right Control

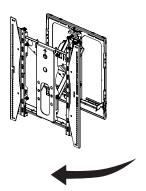

## Tilt Right




**Left Control** 



(О) ОИТ


**Right Control** 

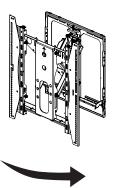





## **Installation Guide**

## Positive / Negative Tilt

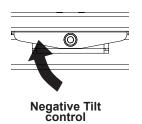

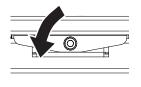

Positive Tilt Control

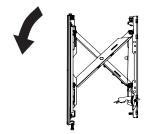


## Post Leveling (Up)





**Left Control** 

**Right Control** 

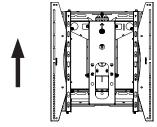


## Post Leveling (Down)






**Left Control** 

**Right Control** 

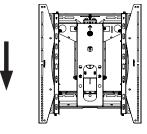




Push evenly on location as shown

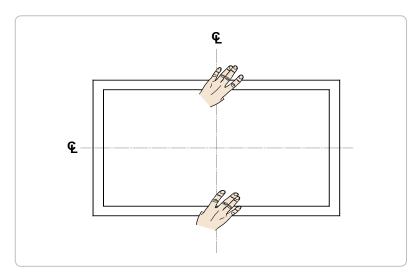

Use the GAPit GO/No Go Gauge (supplied with model specific spacer) as a final step in the process to inspect and adjust the gap to prevent costly replacement and extend the lifespan of the displays.

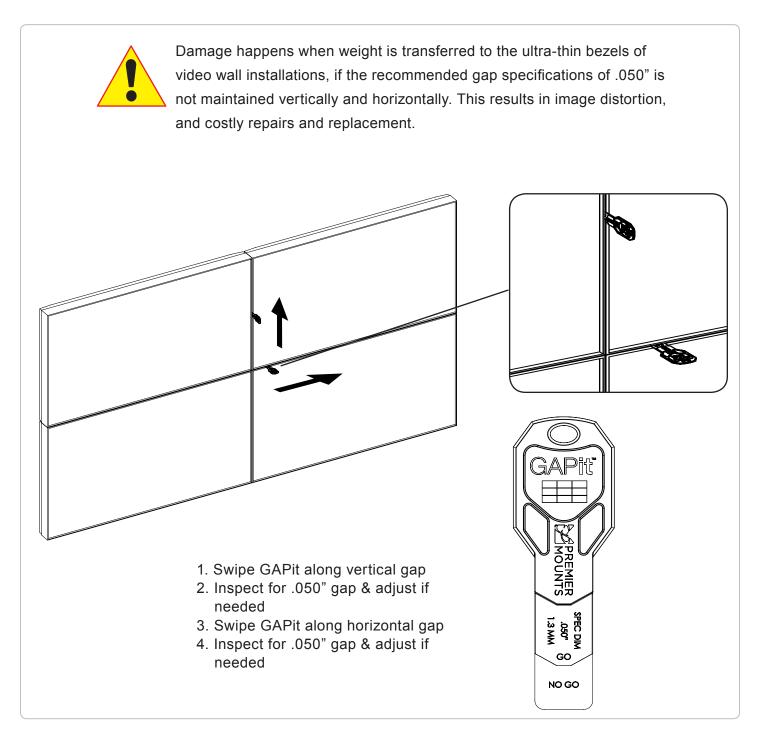



#### **Installation Guide**

### **Maintenance**

 Push evenly in the front of the LMVSP to release the single latch spring lock(Figure 1).


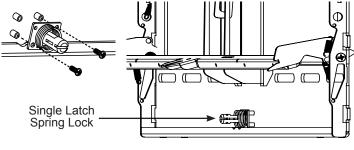



Figure 1

## Servicing

- Slowly pull the front of the LMVSP to extend the scissor arms (Figure 2).
- 2) Loosen the locking safety screws on both mounting brackets.
- Tilt up the bottom of the flat-panel, then set their kickstands against the bottom tubing of the mount (Figures 2 & 3).

You can now reach behind the flat-panel for maintenance and servicing or replacement. After servicing, make sure the spring lock is locked again in the mount's closed position.

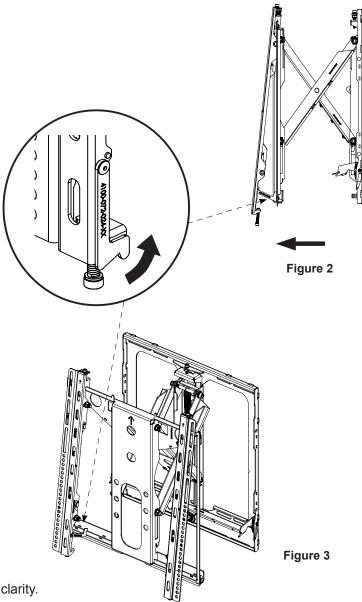

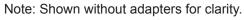



## PREMIER MOUNTS LIMITED LIFETIME WARRANTY

#### What and Who is Covered by this Limited Lifetime Warranty

Premier Mounts warrants all mounting products to be free from defects in material and workmanship for the lifetime of the original installation of the product.

#### What Premier Mounts Will Do

At the sole option of Premier Mounts, Premier Mounts will repair or replace any product or product part that is defective. If Premier Mounts chooses to replace a defective product or part, a replacement product or part will be shipped to you at no charge, but you must pay any related labor costs.

#### What is Not Covered: Limitations

Premier Mounts disclaims any liability for damage to mounts, adapters, displays, projectors, other property, or personal injury resulting, in whole or in part, from improper installation, modification, use or misuse of its products.

NOTWITHSTANDING ANYTHING TO THE CONTRARY IN THIS WARRANTY, THIS WARRANTY IS LIMITED TO FIVE YEARS FROM THE DATE OF PURCHASE IN THE EVENT THAT THE WARRANT-ED PRODUCT IS COMMERCIALLY RENTED OUT.

Electrical products and components, such as amplifiers, speakers, motors, switches remote controls and related electrical items, are backed by a 3-year warranty.

Premier Mounts disclaims all other warranties, express or implied, including warranties of merchantability and fitness for a particular purpose. Premier Mounts is not responsible for incidental or consequential damages, including but not limited to, inability to use its products or labor costs for removing and replacing defective products or parts. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

#### What Customers Must Do for Warranty Service

If you discover a problem that you think may be covered by the warranty, you must report it in writing to the address below within thirty (30) days. Proof of purchase (an original sales receipt) from the original consumer purchaser must accompany all warranty claims. Warranty claims must also include a description of the problem, the purchaser's name, address, and telephone number. General inquiries can be addressed to Premier Mounts Customer Service at 1-800-368-9700. Warranty claims will not be accepted over the phone or by fax.

Premier Mounts Attn: Warranty Claim 1321 S. State College Blvd. Fullerton, CA 92831 USA

### **How State Law Applies**

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Premier Mounts intends to make this manual accurate and complete. However, Premier Mounts makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Premier Mounts makes no representation of warranty, expressed or implied, regarding the information contained herein. Premier Mounts assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

